
User Manual and Product Specifications

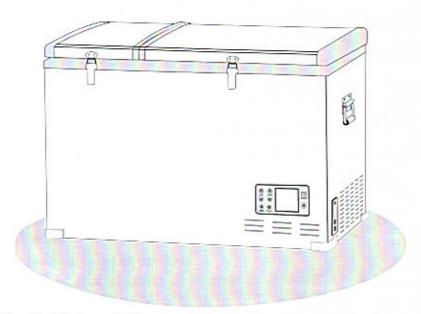

Part No.BCD80----80L BCD100--100L BCD125--125L

IMPORTANT

Read instrucitons before operation.

The character of the product

- The best electronic technology, high efficiency, low energy consumption
- Multi-voltage system (DC 12/24 Volt)
- Battery protection, protect your vehicle battery efficiently

1.Safety Instructions

Warning: Do not touch exposed cables with your bare hands, especially applies when operating the appliance from an AC mains. Warning: It is dangerous to touch the plug when your hand is wet. When using the refrigerator in the vehicle or boat, please make sure the electricity has a fuse if using the mains power.

The installation of the DC power source in the boat should be handled by the qualified personnel.

Make sure the voltage is right. On the technical data label there is the voltage data.

Do not place any electrical devices inside the refrigerator

Please keep the appliance away from substance, which can cause ignition.

The appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the unit safety. Young children should be supervised to ensure that they do not play with the appliance.

2. Notes on using the product

- Your refrigerator requires good ventilation, especially around the back of the refrigerator, allow a gap of at least 200mm around the back and 100mm around the right.
- Avoid humidity: Humidity inside the appliance can form frost and impair cooling. Therefore, defrost it before this happens. Never clean the appliance under running water or in dish water.
- Avoid placing your refrigerator near a heat source. This helps the refrigerator to work more efficiently and keep the contents cool.
- Place the refrigerator on a flat surface and away from any edges. When placing the refrigerator into the car, please use the belt to fasten it.

3.Operation

Power: The 12/24V and mains power can both be present at the same time, the device will always set itself on mains power priority feeding by 100-120V / 220-24V. The electronic device can control the compressor system and have the function of battery protection. When the input voltage comes to the minimum, it can stop the compressor; when the voltage comes back to the normal value, the compressor will rework automatically.

Battery Protection: Selecting the Low. Med. High positions of the switch, you can choose different levels for battery protection. Here below you can find the battery tension values when the compressor stops running (cut-out) and when the compressor restarts working

Battery protection 12V CUT-OUT 12V CUT-IN 24V CUT-OUT 24V CUT-IN	12V CUT-OUT	12V CUT-IN	24V CUT-OUT	24V CUT-IN
LOW	10.2V	11.27	21.6V	23.0V
MED	10.7V	11.7V	22.6V	24.0V
HIGH	11.7V	12.7V	24.6V	26.0V

(cut-in).

Battery electric power display

			Battery			
6	51	4	3	2	1	section
[[Z]	□	•				LCD Display
13.2V	12.7V	12.2V	11.7V	11.2V	10.7V	Battery level

Buzzing

V


- If you press any button, the refrigerator will have a buzzer alarm sound.
- The battery gauge to display the gear to 1, a buzzer alarm sound



The DC cables must have a suitable cross-section for their length, according to this table:

10	6	4	2.5	[mm2]	Cabl
8	10	12	12	AWG	Cable Area
<10	-6	<4	<2.5	[m]	12V Max C
<33	<20	<13	\$	[ft.]	12V Max Cable Length
<20	<12	\$	Ĉ	[m]	24V Max Cable Length
<66	<39	<26	<16	[ft.]	able Length

- *The length is from the battery to the refrigerator.
- -AC Max Cable Length: 0.75mm2 or 18AWG
- —Temperature setting range: -18℃~10℃;
- —The LCD Display range: -20°C~40°C;

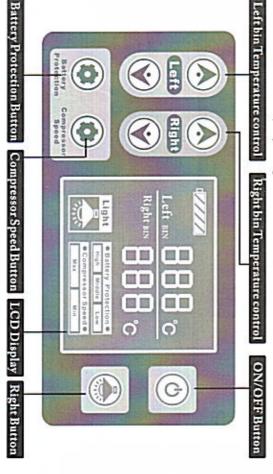

- —Press the \triangle button or ∇ button to adjust the temperature the unit aims to achieve. Press the \triangle button to increase or the ∇ button to decrease the temperature.
- ——Press the left bin \triangle button and ∇ button at the same time to cut off the left bin cooling(only right bin cooling).



- Only set one temperature at a time
- the unit off, hold the ON/OFF button for 3 seconds to turn unit on. ON/OFF power button: Hold ON/OFF button for 3 seconds to turn
- switch back on with the same settings. off automatically and once the power is restored it will automatically If the power source is cut off or disconnected, the unit will switch
- show which speed is selected compressor, MAX (3000 RPM), MIN (2500 RPM) the LCD light will Press the Compressor Speed button to set the speed of the
- cuts out at, LOW, MID or HIGH. The LCD light will show which voltage Press the Battery Protection button to set the voltage the fridge
- If forget to turn off the right, the light will be turn off automatically in 3 and the LCD will display, Press the 🕞 button again, the light turn off; -Press the 🛞 button ,then the light of the left and right bin turn on
- automatically when the energy is on again. -If the power supply is cut off, the refrigerator will switch on
- -If you press any button, the refrigerator will have a buzzer alarm

DUALZONE

18°C to +10°C Temperature may be set independently for each Zone in the range -


equal to the Right Zone Please note: The Right Zone must always be set to an equal or cooler temperature than the Left Zone . If the Right Zone is set to a temperature for the Left Zone will automatically be adjusted to be temperature warmer than the setting for the Left Zone ,the set

might think of freezer area in a domestic kitchen Fridge/Freezer. In general, think of the Right Zone as the colder zone, like you




Set the temperature for the

not allow a setting cooler than the Right Zone equal or warmer than the Right Zone , but will Right Zone first .The control panel will allow the Left Zone to be set to any temperature

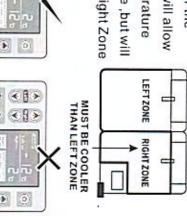




temperature as the Right Zone



temperature than the Right Zone Left Zone may be set to a warmer




Left Zone cannot be set to a cooler than the Right Zone

SINGLE ZONE MODE


utilized as a single fridge or freezer not required allowing the Right Zone to be allows the Left Zone to be turned off when The LED display will turn off. Zone ⊗+⊛ buttons simultaneously. To turn the Left Zone off, press the Left This unit equipped with the feature that

⊗+**⊗** buttons simultaneously. To activate the Left Zone again ,press the

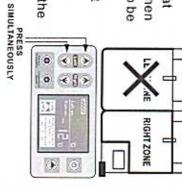

4. Cleaning and maintenance

- water, and then clean it week. If it is dirty, using sodium bicarbonate dissolved in lukewarm Clean the appliance inside and out with a damp cloth for every
- shut off, warn inside, with food inside or lid closed rinse with clean water and dry carefully. Do not leave the refrigerator Never use abrasive products, detergents or soap. After washing
- as these can damage the refrigerator. Do not use abrasive cleaning agents or hard objects during cleaning -Never clean the appliance under running water or in dish water.

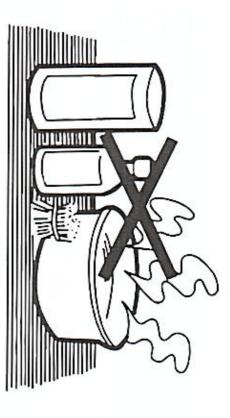

5. Troubleshooting

- The appliance is out of work
- —Check the power supply
- —Whether the plug and the socket have a good connection.
- —Whether the fuse has been burned out
- —Whether the appliance has been turned on
- The food inside is frozen.
- I he setting temperature is too low
- Bad performance in refrigeration
- —Has too much food been placed inside the refrigerator
- ---The door is unlock
- —The door seal is broken
- —Problems arising from poor ventilation
- —There are too much heated food inside
- —There is no room around the appliance
- —There is a hot source around
- The temperature setting is inappropriate
- Hear the sound of water from the inside place
- —It's normal, due to the flow of the refrigerant.
- Noise
- —The refrigerator is not placed on a level surface
- Touch the wall or other place
- —The parts fall off the interior of the refrigerator





7.Technical Data (DC)

FOAM VESICANT C5H10/C-Pentane	REFRIGERANT(g) 90g 100g	RATED CURRENT FOR DC (A) 5.4A/2.7A	TOTAL INPUT POWER (W) 65W	DCFUSE(A) 15A	RATED VOLTAGE DC (V) 12/24V	PROTECTIVE CLASSIFICATION OF ELECTRIC SHOCK RESISTANCE	CLIMATIC CATEGORY T/ST/N/SN	2000000
	1109							00014300

Guidelines for protection of the environment

DISPOSAL: Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.



Meaning of crossed-out wheeled dustbin: Do not dispose of electrical appliances as unsorted municipal waste. Use separate collection facilities.

Contact you local government for information regarding the collection systems available.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.